


**KitchenAid®**

## OVEN PARTS

For Models: KEMS308SBL00, KEMS308SWH00, KEMS308SSS00  
(Black) (White) (Stainless)

30" BUILT-IN ELECTRIC  
COMBO OVEN  
THERMAL CONVECTION

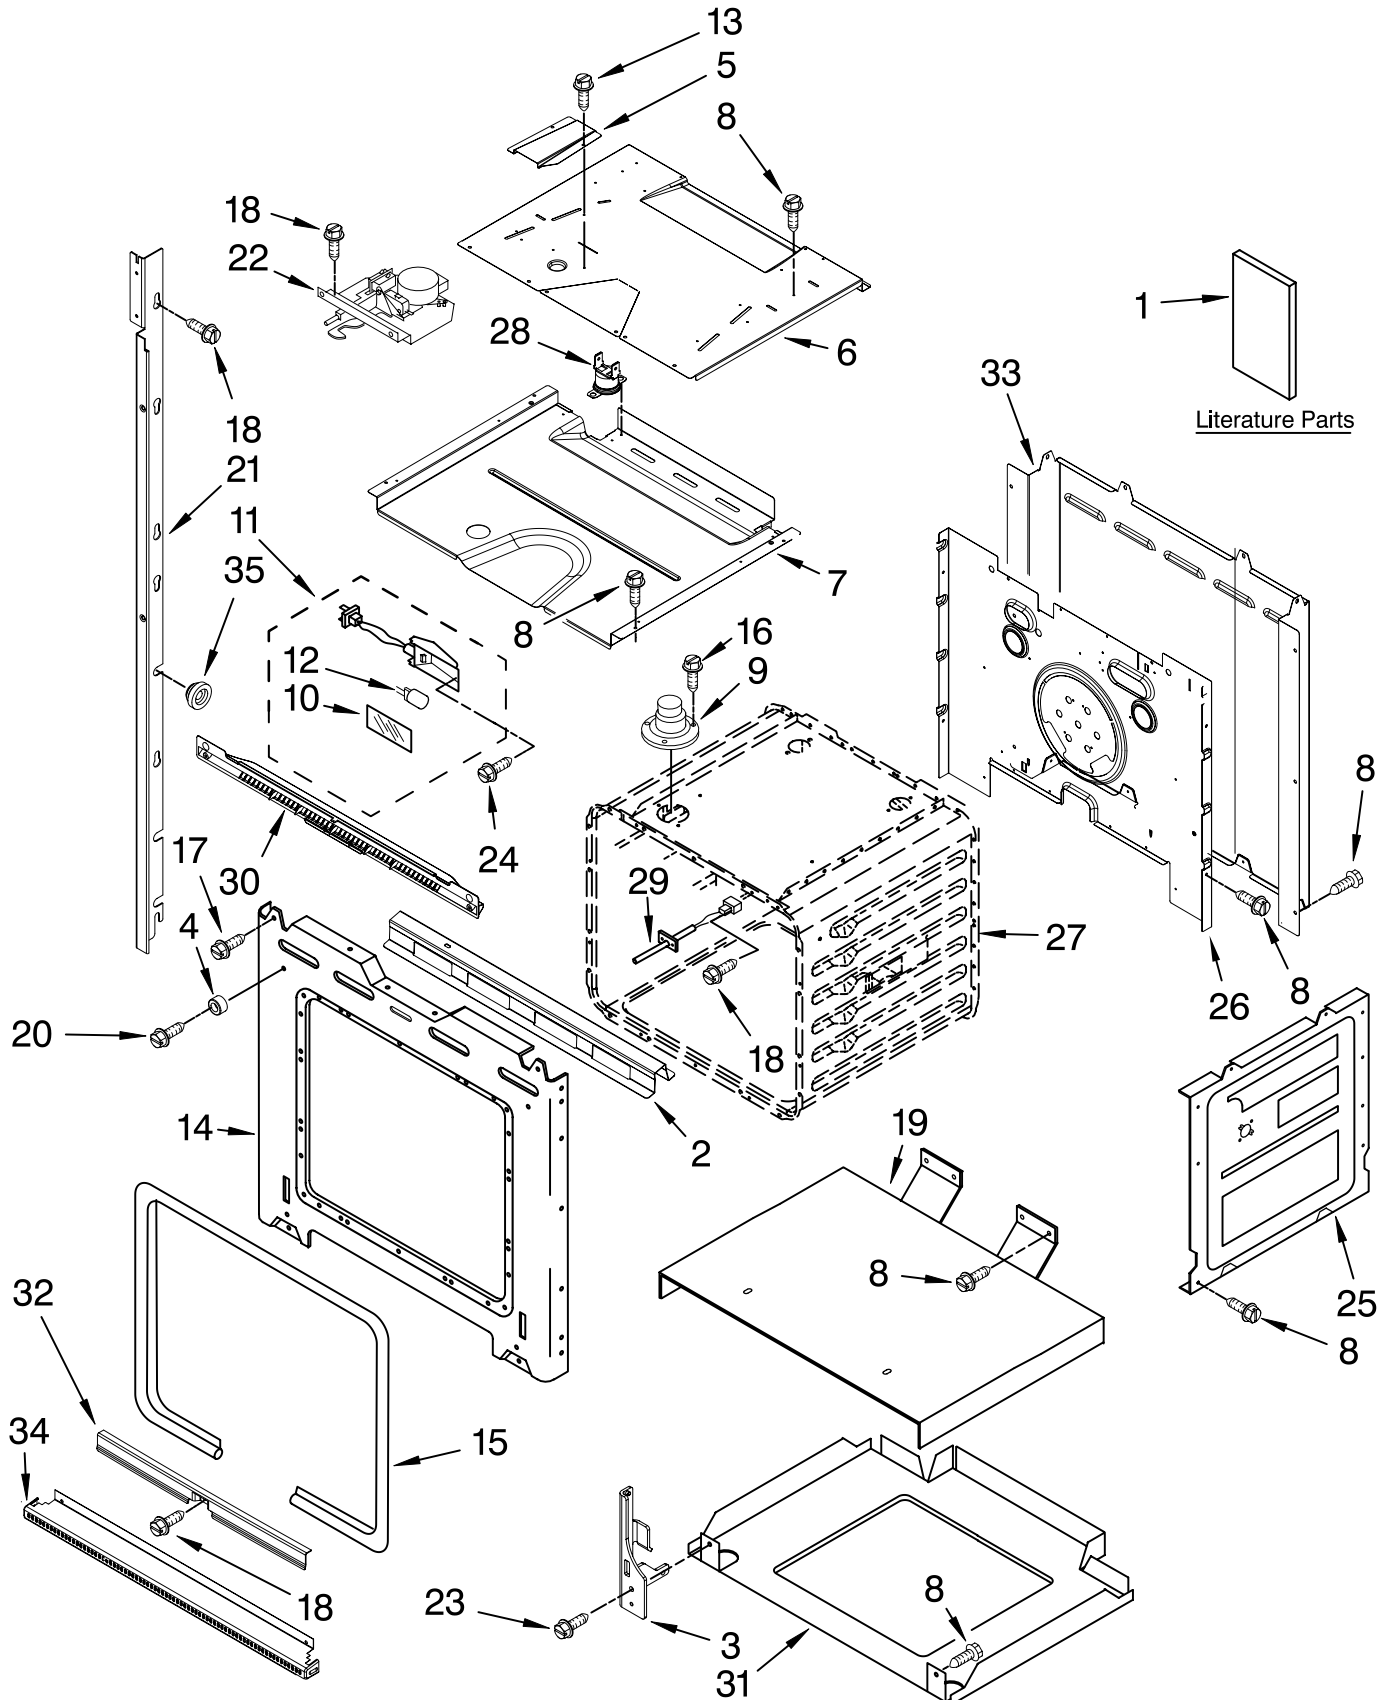

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN PARTS

For Models: KEMS308SBL00, KEMS308SWH00, KEMS308SSS00

(Black)

(White)


(Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Literature Parts	11	4448972	Oven Light Assembly	28	8304452	Thermal Fuse
	8304337	Installation Instructions	12	4452164	Bulb, Light	29	4455636	Sensor
	8304358	Use & Care Guide	13	3400832	Screw (2)	30	8303685	Vent, Center
		Tech Sheet	14	9760756BU	Frame, Front	31	8303516	Base, Chassis
	8304098	English	15	8304493	Gasket, Door	32	8304478	Retainer, Gasket
	8304417	French	16	3196176	Screw	33	8303517	Cover, Back
		Easy Set Guide	17	4449040	Screw	34		Trim, Bottom Vent
	8304338	Oven	18	3400893	Screw		8303705WH	White
	8304375	Microwave	19	4451478	Support, Insulation		8303705BL	Black
		Safer Cooking Tips	20	4450038	Screw (2)		8303705SS	Stainless
	3191638	English	21		Mounting Rail, Side Right	35	4448444	Mounting Grommet, Rail (2)
	9759133	French		8303679BL	Black	<b>FOLLOWING PARTS NOT ILLUSTRATED</b>		
2	8304420	Bracket, Base		8303679WH	White			
3		Hinge Receiver			Left	<b>INSULATION</b>		
	4455606	Right		8303680BL	Black			
	4455605	Left		8303680WH	White			
4	9760749	Bumper, Door (2)	22	8303692	Latch, Motorized		8303965	Insulation, Wrap
5	8303829	Exhaust, Vent Slope	23	4449743	Screw		8303967	Insulation, Back
6	8303513	Divider, Vent	24	4449748	Screw			
7	8303511	Top Chassis	25	4455641	Side, Chassis			
8	4449809	Screw	26	8304303	Back, Chassis			
9	4452158	Tube, Vent	27		Liner, Oven			
10	4452163	Lens, Light			(Not serviceable)			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CONTROL PANEL PARTS


For Models: KEMS308SBL00, KEMS308SWH00, KEMS308SSS00  
(Black) (White) (Stainless)

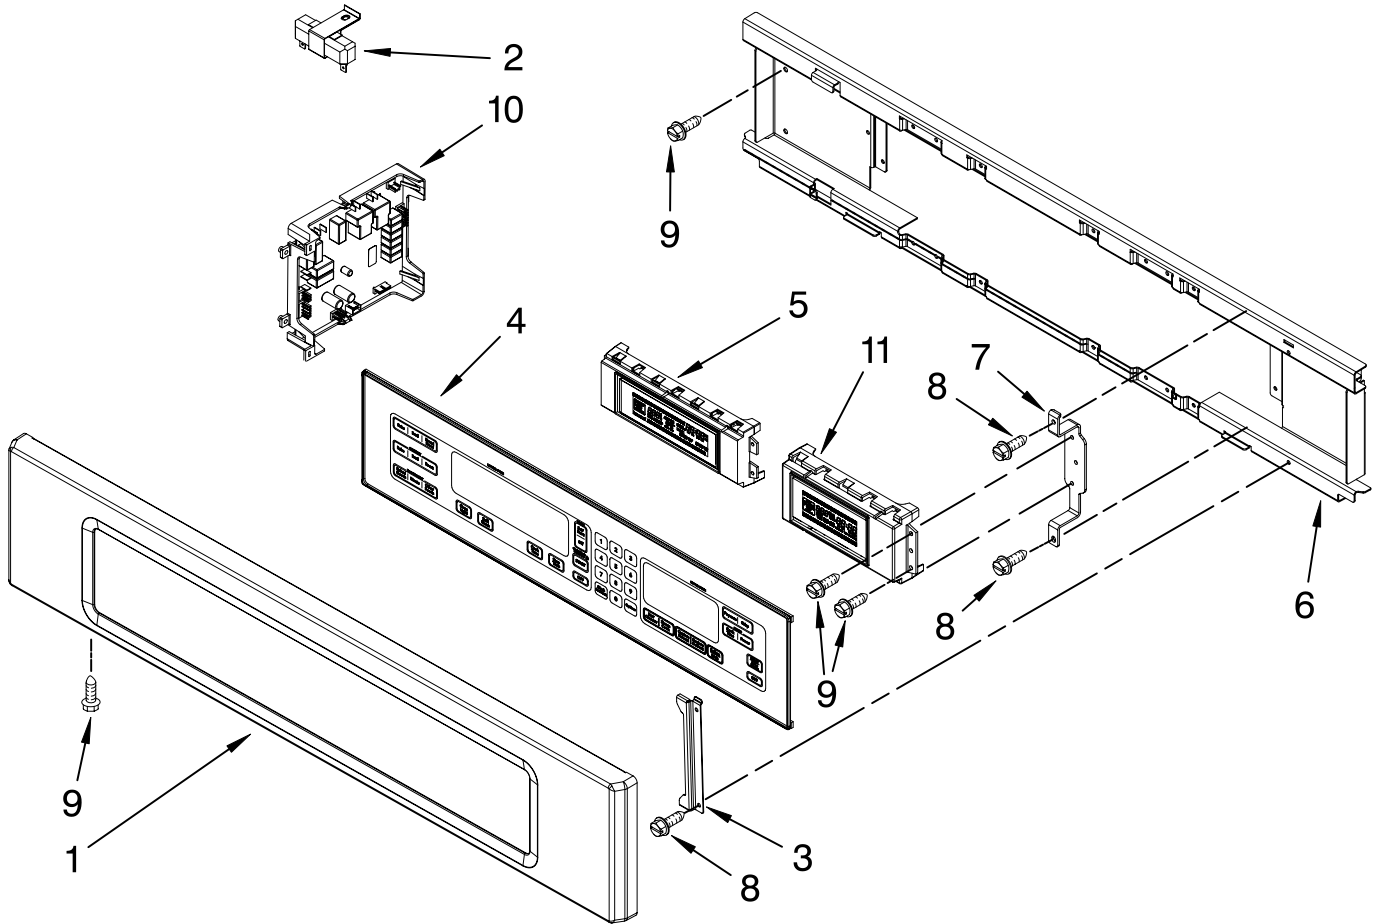

Illus. No.	Part No.	DESCRIPTION
1	8303716WH White 8303716BL Black 8303716SS Stainless	Panel, Control
2	8304441	Resistor, Drop
3	8303797	Bracket, Glass Touch
4	8303882	Keyboard, Glass Touch
5	W10118734	User Interface, Oven
6	8303719	Backer, Control
7	8303887	Bracket, Enclosure
8	4449154	Screw
9	3400805	Screw
10	9760210	Appliance Manager
11	W10118735	User Interface, Microwave

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

**For Models: KEMS308SBL00, KEMS308SWH00, KEMS308SSS00**  
**(Black) (White) (Stainless)**

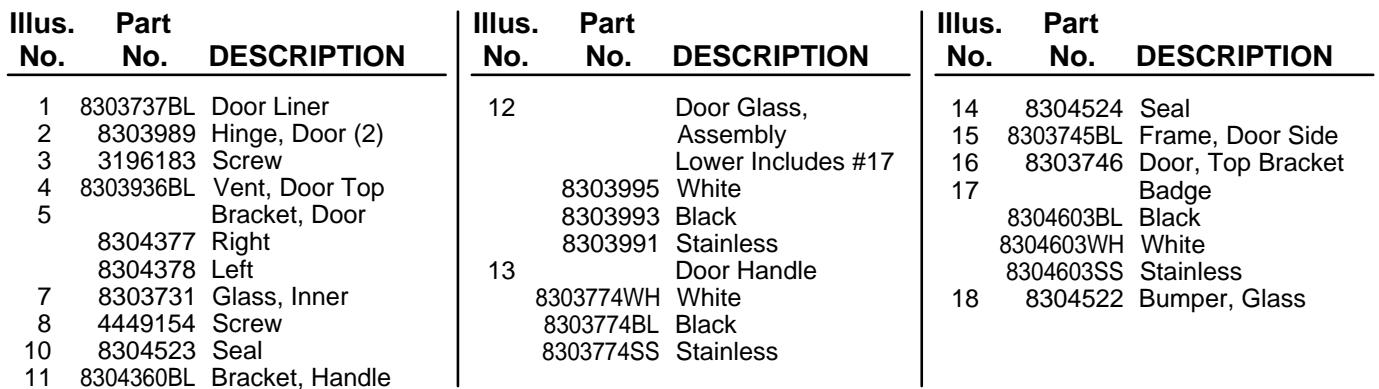

W10121005


# INTERNAL OVEN PARTS

For Models: KEMS308SBL00, KEMS308SWH00, KEMS308SSS00

(Black)

(White)

(Stainless)

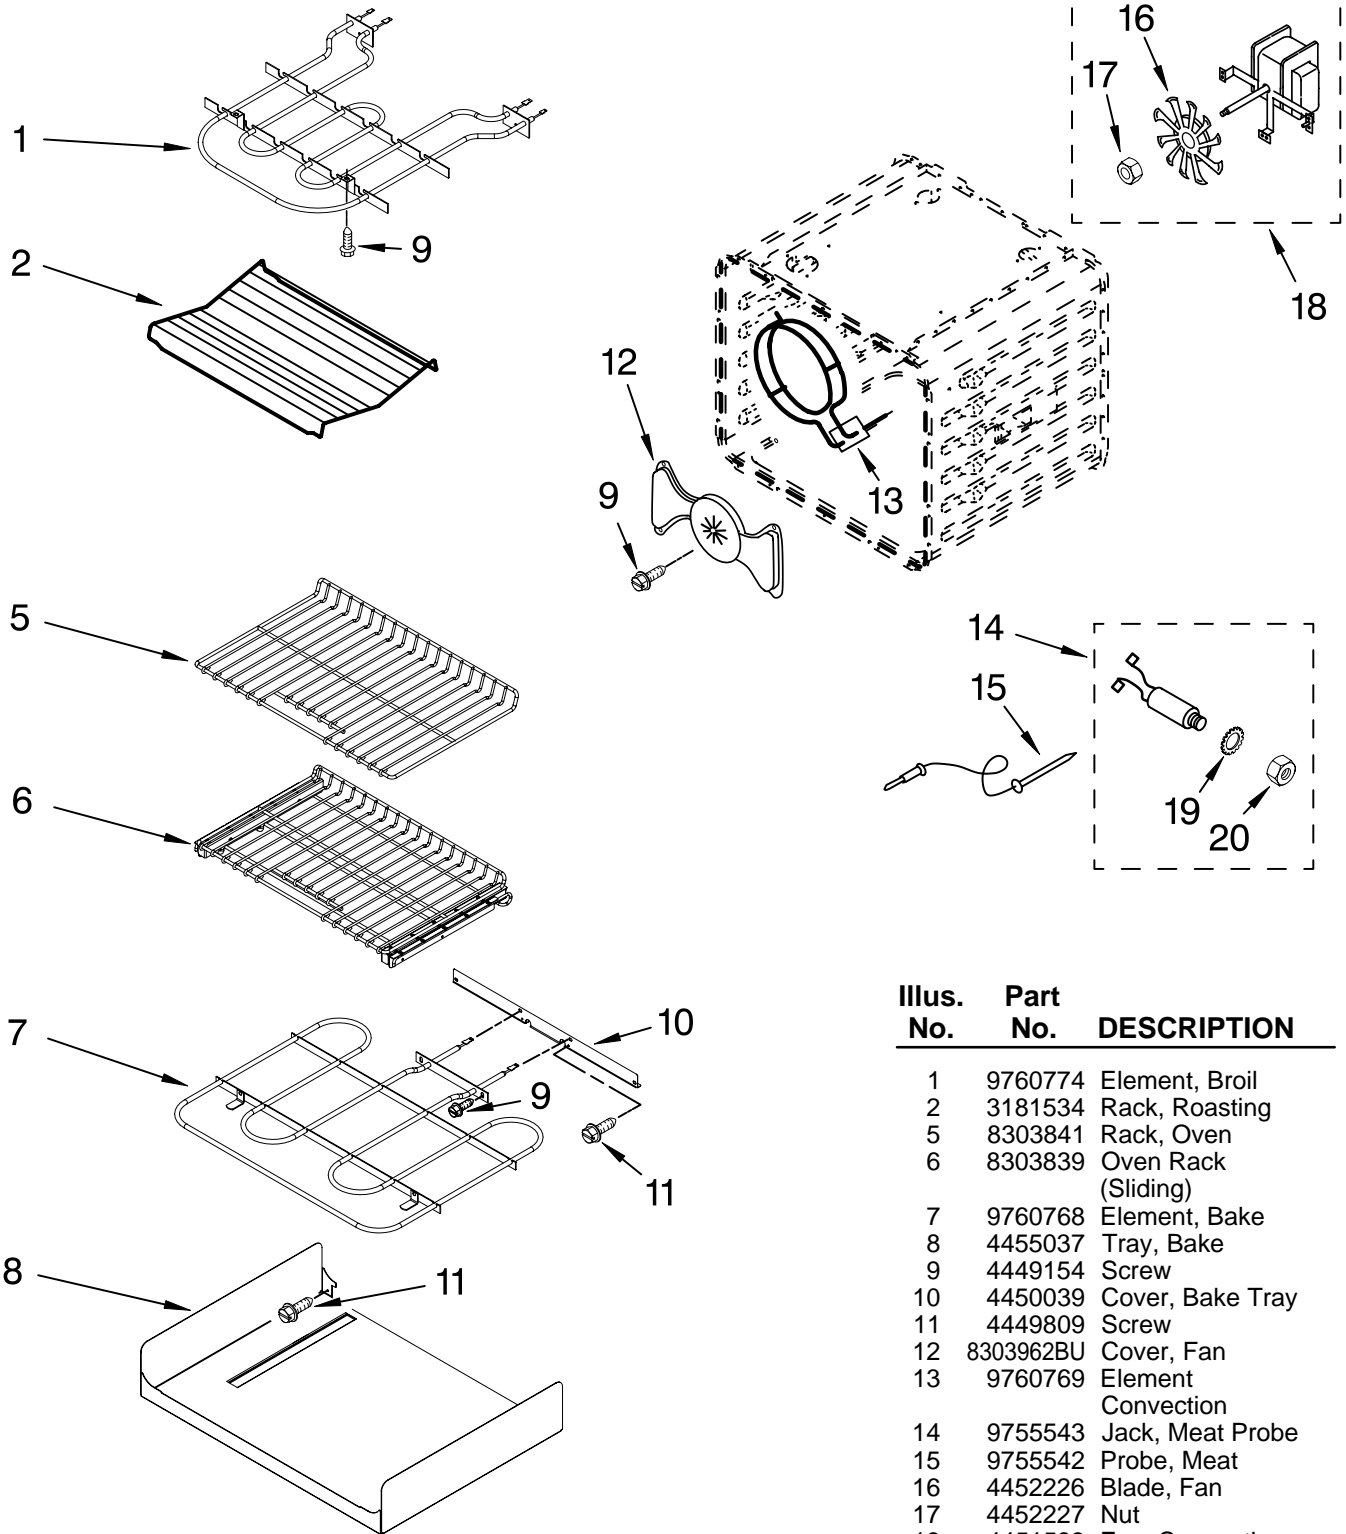

Illus. No.	Part No.	DESCRIPTION
1	9760774	Element, Broil
2	3181534	Rack, Roasting
5	8303841	Rack, Oven
6	8303839	Oven Rack (Sliding)
7	9760768	Element, Bake
8	4455037	Tray, Bake
9	4449154	Screw
10	4450039	Cover, Bake Tray
11	4449809	Screw
12	8303962BU	Cover, Fan
13	9760769	Element Convection
14	9755543	Jack, Meat Probe
15	9755542	Probe, Meat
16	4452226	Blade, Fan
17	4452227	Nut
18	4451583	Fan, Convection
19	9755547	Washer, Lock
20	9755546	Nut, Hidden


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

**For Models: KEMS308SBL00, KEMS308SWH00, KEMS308SSS00**  
**(Black) (White) (Stainless)**

**(Black)**

**(White)**

**(Stainless)**

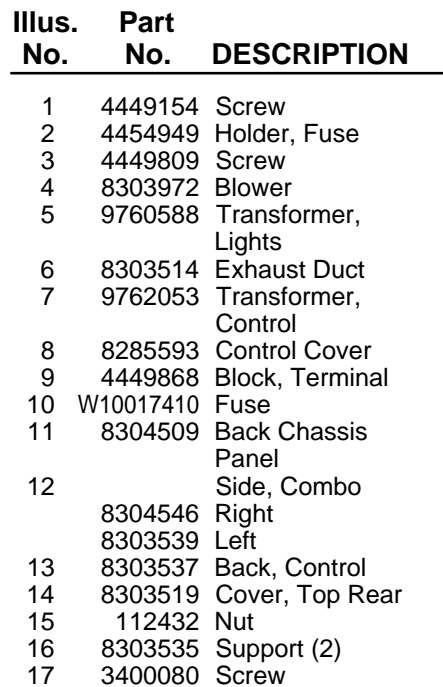

W10121005


# CABINET AND STIRRER PARTS

For Models: KEMS308SBL00, KEMS308SWH00, KEMS308SSS00

(Black)

(White)

(Stainless)

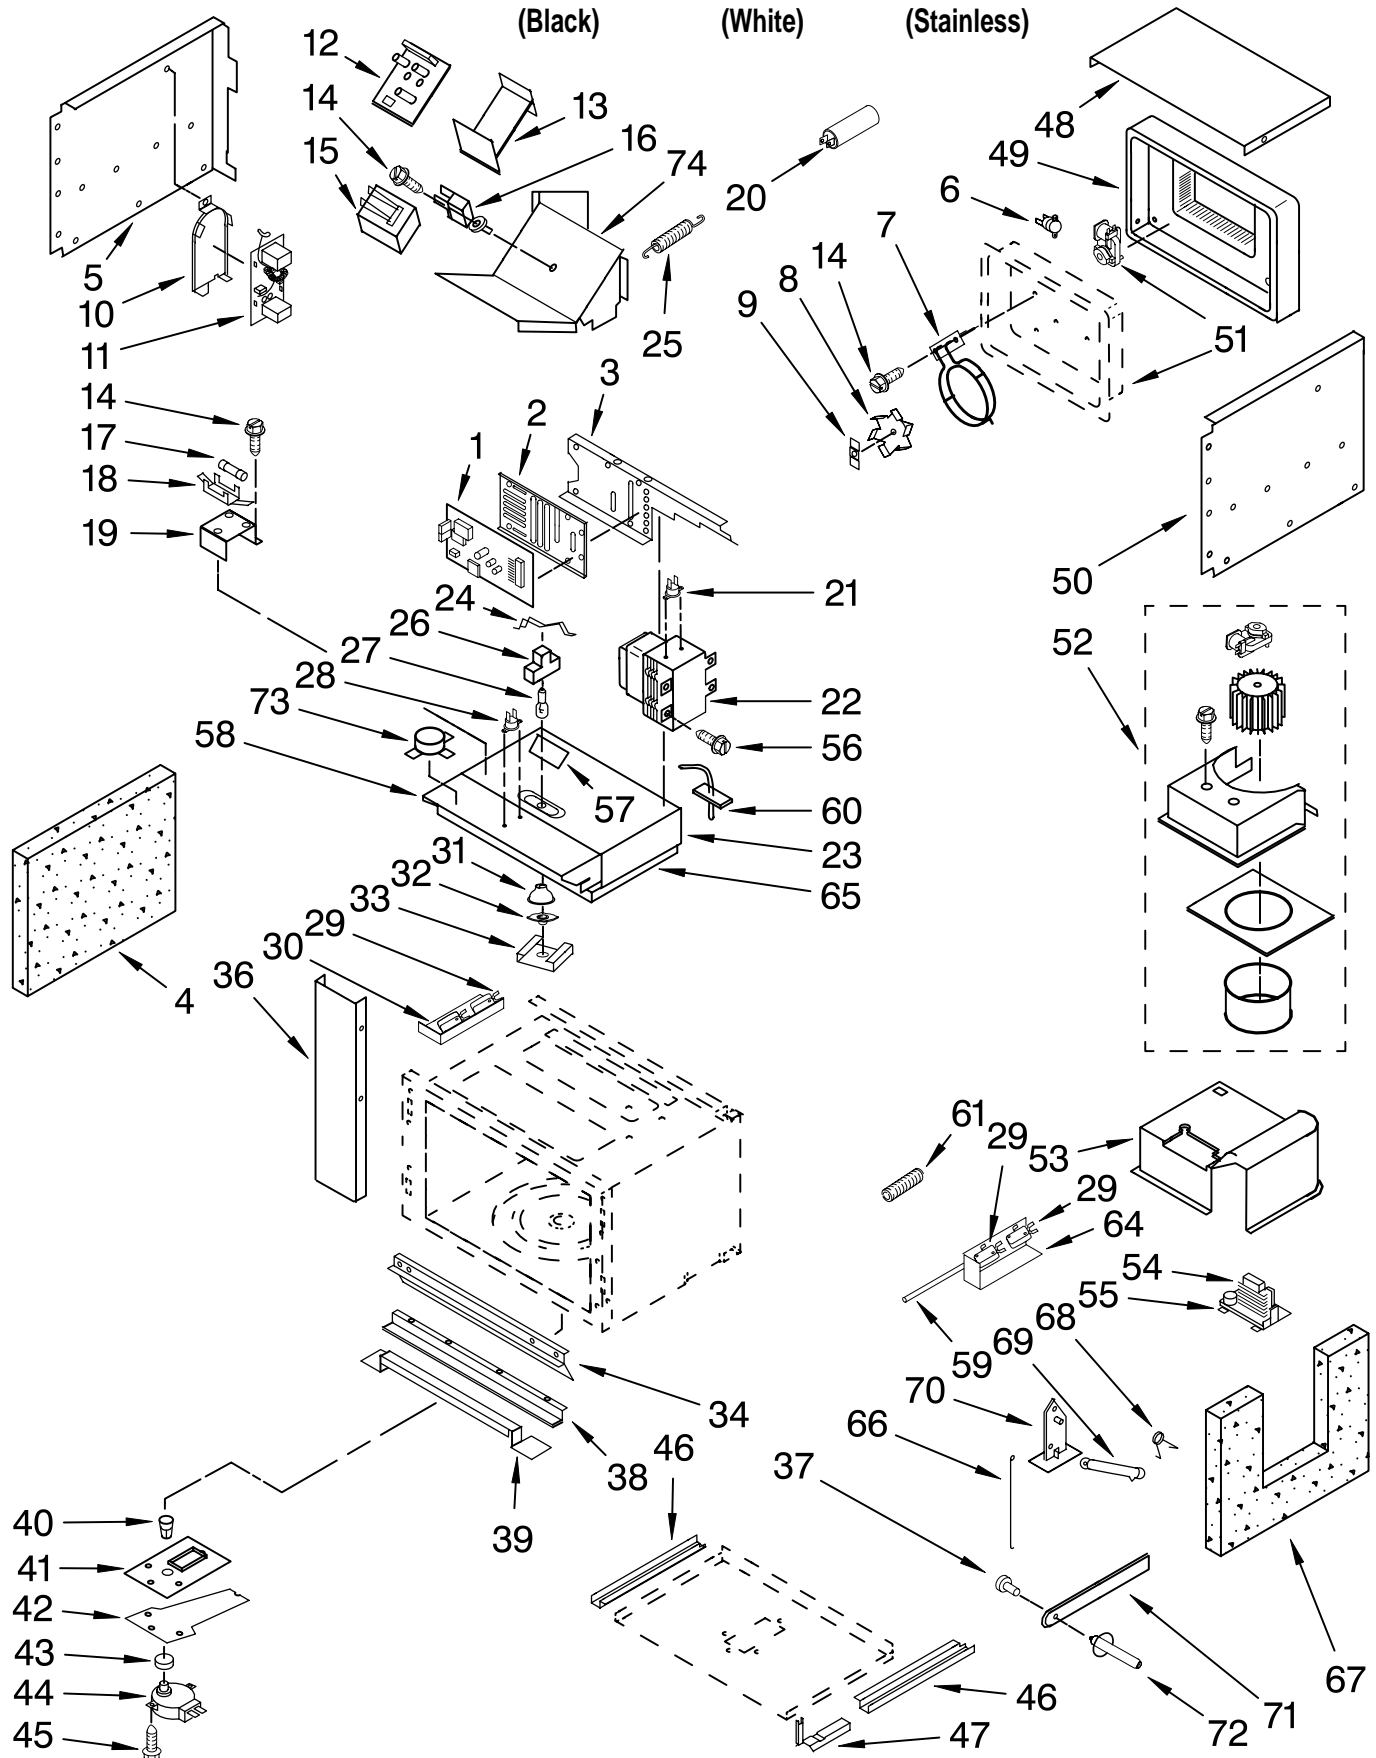

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CABINET AND STIRRER PARTS

For Models: KEMS308SBL00, KEMS308SWH00, KEMS308SSS00

(Black)

(White)

(Stainless)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	W10120227	Control, Electric	26	8205658	Housing, Lamp	49	W10130904	Cover, Rear
2	8205669	Support	27	4375348	Lamp	50	8205680	Cover, Side Right
3	W10130892	Plate, Air	28	W10120222	Thermostat	51	W10120221	Convection, Motor
4	W10130901	Insulation, Side Left	29	W10131248	Switch			Assmebly
5	W10120471	Cover, Side Left	30	8205683	Holder, Switch	52	8205721	Blower Assembly
6	W10120223	Thermostat	31	4375320	Reflector	53	W10130907	Cover, Inverter
7	W10120224	Element, Convection	32	4375318	Lens, Lamp	54	W10120229	Inverter
8	4375418	Fan	33	W10120231	Clip. Spring	55	W10130906	Holder, Inverter
9	W10120233	Nut, Speed	34	W10120477	Top Vent	56	W10130890	Screw
10	W10130891	Holder	36		Trim, Side	57	W10130908	Baffle, Air
11	W10120220	Noise Filter		W10120473	Right	58	W10130899	Plate, Air
12	W10120228	Control, Electric Converter		W10120475	Left	59	W10120235	Rod, Release
13	W10130909	Bracket, Support	37	W10120469	Bushing	60	W10120225	Sensor
14	W10131249	Screw	38	W10130905	Bracket, Support	61	8205685	Spring
15	8205692	Transformer	39	8205708	Bracket, Support	64	8205683	Interlock
16	4375427	Actuator	40	8205682	Shaft, Turntable	65	W10130900	Insulation
17	4375321	Fuse			Turntable	66	8205704	Spring
18	4375231	Block, Fuse	41	8205681	Cover, Motor	67	W10130902	Insulation
19	W10130897	Bracket, Support			Turntable	68	8205689	Spring
20	8205653	Filter, Noise	42	W10120234	Cover	69	8205688	Arm
21	8205654	Thermostat	43	4375252	Gasket, Shaft	70	8205686	Support
22	W10120113	Magnetron	44	8205655	Motor, Turntable	71	W10120236	Arm
23	W10130895	Plate, Air	45	4375202	Screw	72	W10120470	Pin, Damper
24	4375319	Spring, Lamp	46	8205707	Support	73	8205690	Sensor
25	8205685	Spring	47	W10120478	Hinge, Door	74	W10130898	Duct, Magnetron
			48	W10130903	Cover, Plate			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST




# INTERNAL MICROWAVE PARTS

For Models: KEMS308SBL00, KEMS308SWH00, KEMS308SSS00

(Black)

(White)

(Stainless)

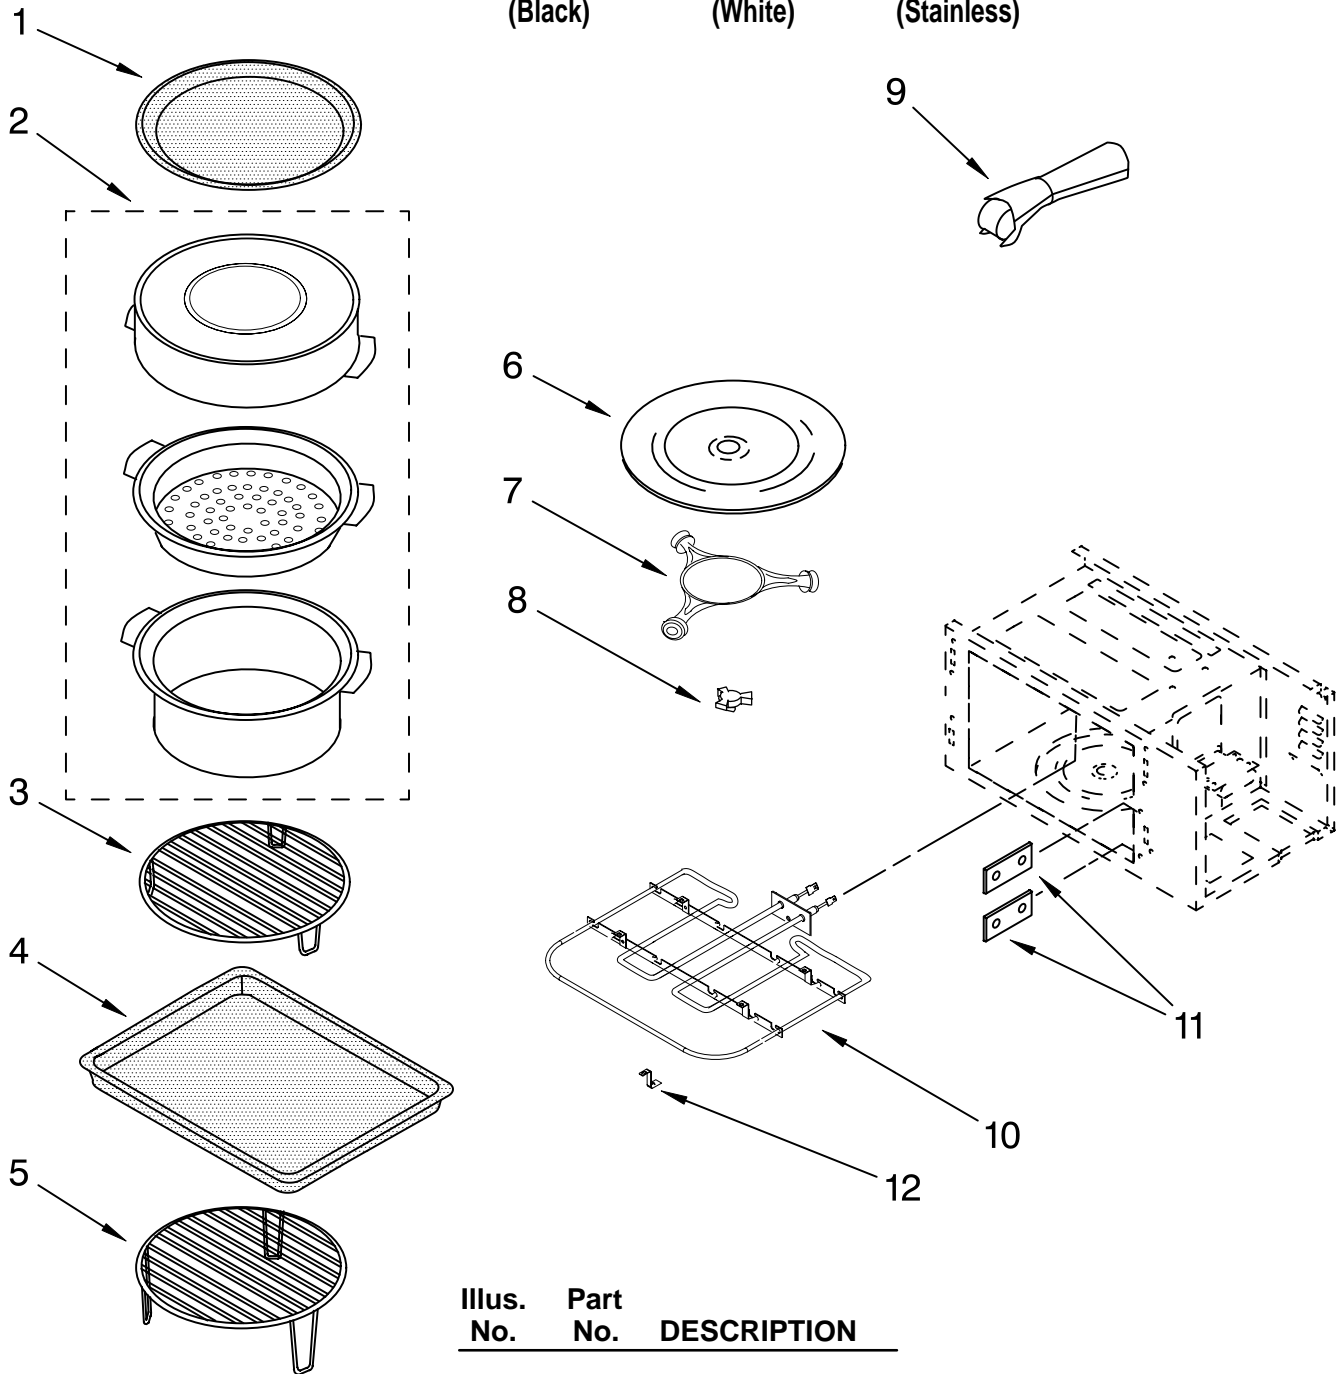


Illus. No.	Part No.	DESCRIPTION
1	W10120480	Crisp Plate
2	W10120484	Steamer
3	4452220	Rack, Convection
4	W10120486	Plate, Baking
5	W10120483	Rack
6	8205676	Turntable
7	8205678	Ring
8	8205677	Drive, Turn Table
9	W10120481	Handle, Pan
10	W10120226	Grill Heater
11	W10120230	Cover, Plates (2)
12	W10120232	Bracket, Mounting

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# MICROWAVE DOOR PARTS

For Models: KEMS308SBL00, KEMS308SWH00, KEMS308SSS00  
(Black) (White) (Stainless)

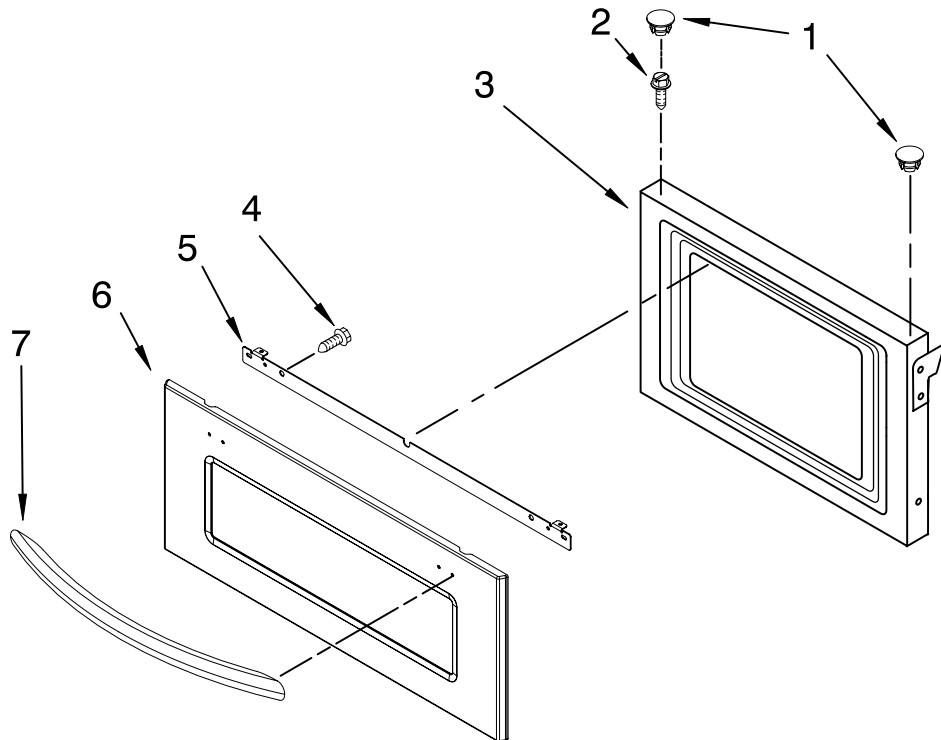

Illus. No.	Part No.	DESCRIPTION
1	8303953BL	Button, Plug (2)
2	4449809	Screw
3	W10120487	Door, Microwave
4	4449154	Screw (4)
5	8303033	Bracket, Handle
6		Glass Assembly
	8304027	Black
	8304028	White
	8304026	Stainless
7		Handle, Door
	8303774BL	Black
	8303774WH	White
	8303774SS	Stainless

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS

For Models: KEMS308SBL00, KEMS308SWH00, KEMS308SSS00

(Black)

(White)

(Stainless)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

## PAINT, TOUCH-UP (1/2oz.)

	72017	White
	261869	Cord Brown
	72032	Black

## PAINT, SPRAY

	350930	White
	261900	Citrine White
	830864	Black

## ADHESIVE

	591014	Adhesive Loctite (1/3 oz.)
	482338	Sealer, Silastic (3 oz.)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

## SPLICING WIRES--25FT.

### LENGTH

	242828	Wire (12 Ga. 150 c Black)
	242820	Wire (14 Ga. 150 c Black)
	242821	Wire (14 Ga. 150 c Blue)
	242822	Wire (14 Ga. 150 c Brown)
	242830	Wire (14 Ga. 200 c Brown)
	242823	Wire (14 Ga. 150 c Green)
	242824	Wire (14 Ga. 150 c Orange)
	242825	Wire (14 Ga. 150 c Red)
	242831	Wire (14 Ga. 200 c Red)
	242827	Wire (14 Ga. 150 c Yellow)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

## FOLLOWING PARTS NOT ILLUSTRATED

### WIRING HARNESS PARTS

	8304102	Harness, Latch
	8304052	Harness, User Interface
	4452400	Lead, Ground
	4449809	Screw
	8304038	Harness, Main
	4450831	Ground, Microwave
	4450800	Screw, Ground
	4449809	Screw
	8304440	Conduit, Combo
	313438	Clip, Harness
	4454835	Tie, Cable

### Miscellaneous

	4448950	Screw, Install (4)
	814381	Hinge Pin Kit
	98997	Clip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST